




DOORPULL DRILLING TEMPLATE

FOR: DP4, DP5

- 1 Decide on handle height on door.
 - 2 Decide on backset (i.e. distance from door edge to centre of handle).
 - 3 Fold template using required backset.
 - 4 Position on required height centre line.
 - 5 Mark the correct hole positions for the model you have purchased, DP4 580 mm B/C or DP5 450 mm B/C.
- Important: Only drill 2 holes that correspond to your purchased handle.**
- 6 Mark hole positions (2 holes only).
 - 7 Pilot drill 3mm holes through door.
 - 8 Finish drill 8mm holes from either side of door to help prevent any splintering.

Note: For tempered glass doors (we suggest drilling to be arranged by a glass specialist), 2x 9mm holes required. Please fit plastic bushes and feet between handle and glass before clamping on door.

NOTE: USE LONGER SCREWS FOR WOODEN DOORS.

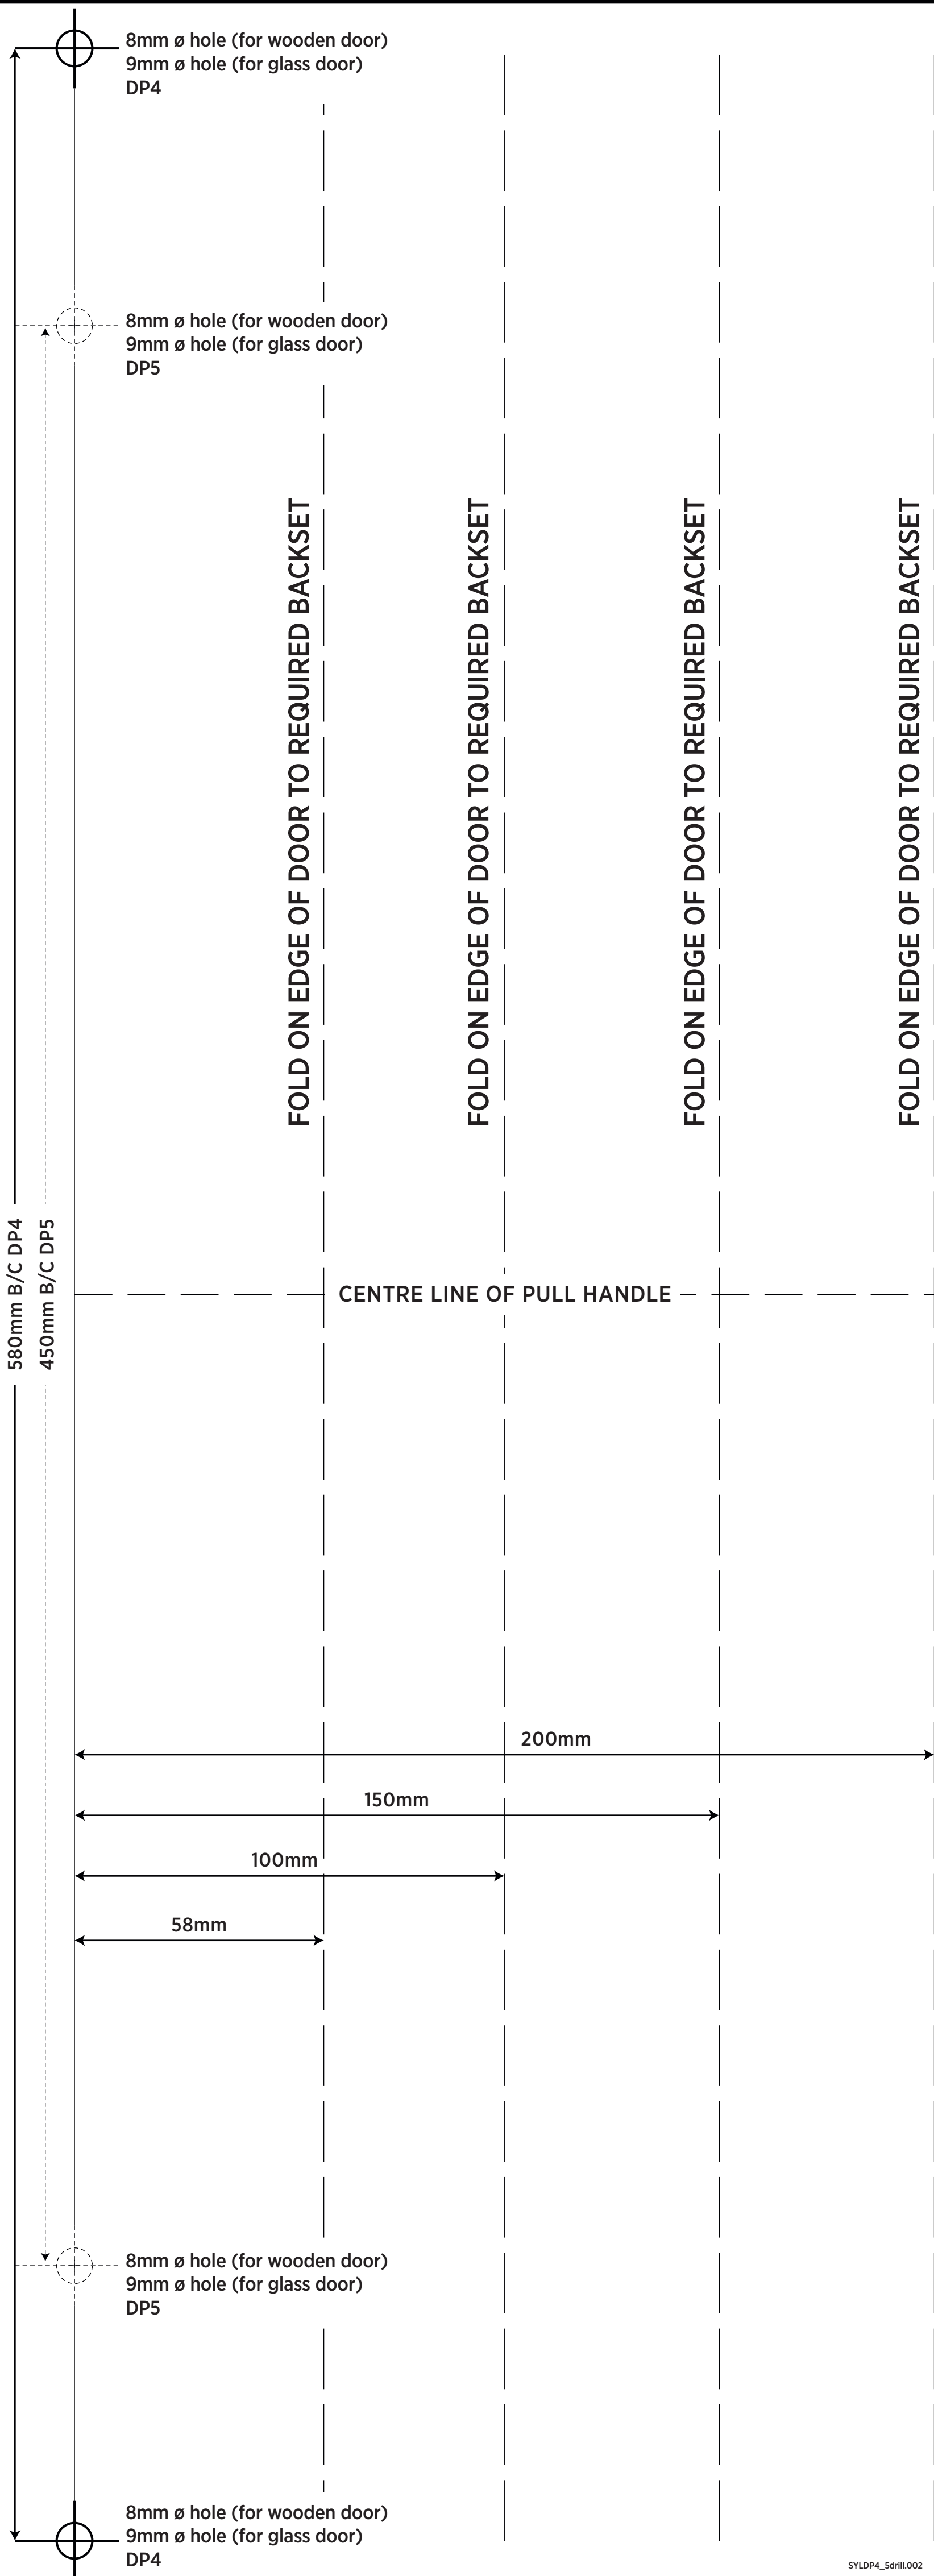

G.D. Rutter Limited
127 Diana Drive,
Glenfield, Auckland
PO Box 100-183 NSMC,
Auckland 0745
Phone: 09 444 5359
Facsimile: 09 444 3972