


1

Mark and drill door.

Using template, mark


- Centre of door edge
- 6mm holes x 2
- 20mm hole through door.

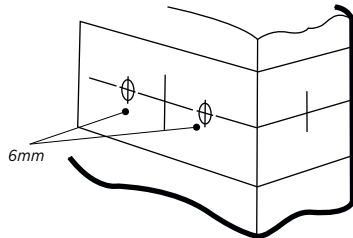

- Drill 25mm hole square to door edge, 100mm deep
- Drill 20mm hole through door face from both sides
- Drill 2x 6mm holes through door face from both sides


2

Check forend of latch and fit latch.

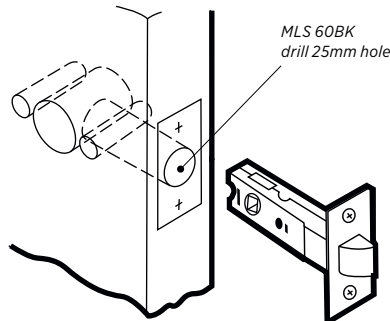

3

Decide on handing of latch.

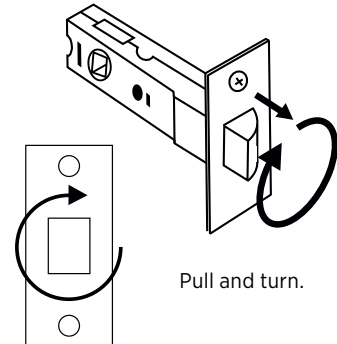

Pull and turn.


4

Fit spindle through latch.

Offset hole at the bottom.


Slide spindle in from outside face of door until spindle comes to a solid stop inside latch.

Note: O-ring groove on inside.

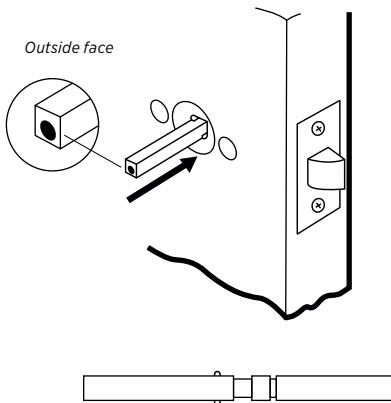

5

Fit rubber O-ring into slot mid way down spindle.

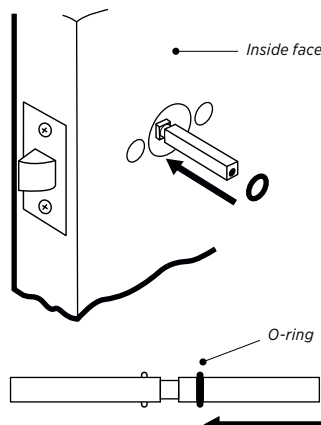


Note: From inside face.

6

Check O-ring is seating correctly in spindle.


Check to make sure spindle cannot slide out. O-ring should hold spindle in firmly.

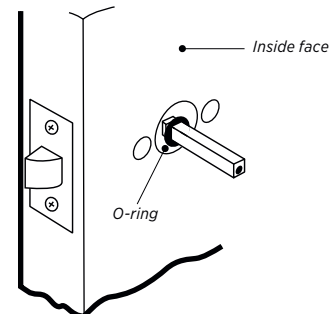

7

IMPORTANT STEP.


Fit through bolt fixing screw.

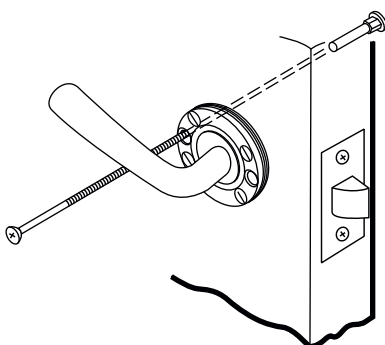

8

Fit both handles onto spindle.


Fit 4x wood screws each side.

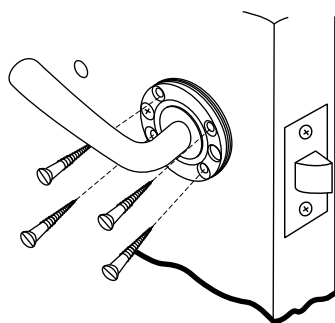

9


Fit cover plates over handles.

Tighten up grub screws onto the spindle using allen key provided.

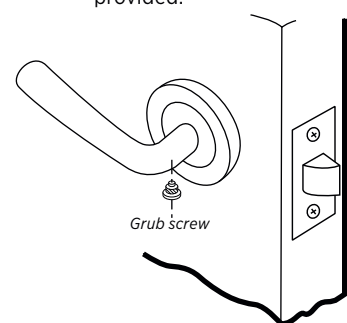

10


Fit bathroom snib to inside handle.

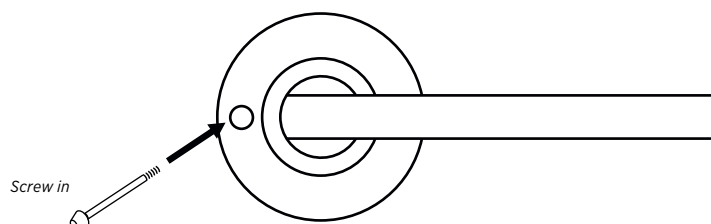

11

Check action while door is open.

- Push snib button, check outside is locked.
- Pull on inside handle. It should pop off button.
- If ok, check operation with door closed.

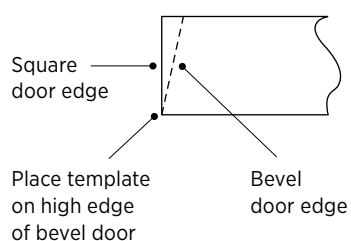

Mark centre of door

Drill 25mm hole at centre of the door edge

